

User Codes management for wireless Agility3 Alarm System



The user assigned the Grand Master authority level can change all user codes but cannot view the digits in the user code fields. Users with other authority levels can only change their own codes. The system must be disarmed in order to set or change user codes.

Note: User codes can also be defined from the web application

To set/change a user code:

1. Press the star ***** button
2. Enter your code
3. Using the arrow keys, scroll to the option Codes/Tags and press the **#?** button

Note: If you enter a wrong user code, the keypad produces 3 short beeps and the "Wrong Code. Please Try Again" message will be heard. Press quickly and re-enter the above sequence correctly.

4. Scroll to Access Codes and press the **#?** button
5. You will see the option New/Change. Press the **#?** button
6. Using the arrows scroll to select the User Index number to which you want to assign a user code and press the **#?** button

Note: In the Agility system, the User Index number is from 00 to 31, where 00 belongs to the Grand Master.

7. Enter the new code and then re-enter the code.
If successful, a single confirmation beep is sounded, if not, 3 quick error beeps are sounded
8. Repeat the above steps for additional codes until you have completed your list

The ***** button sits under the 7

The **#?** Button sits under the 9

Deleting User Codes

At times, you may want to completely delete a user code.

Note that it is impossible to delete the Master Code (although it can be changed).

The system must be disarmed in order to delete user codes.

To delete a user code:

1. Press the star ***** button
2. Enter your code
3. Using the arrow keys, scroll to the option Codes/Tags and press the **#?** button

Note: If you enter a wrong user code, the keypad produces 3 short beeps and the "Wrong Code. Please Try Again" message will be heard. Press quickly and re-enter the above sequence correctly.

4. Scroll to Access Codes and press the **#?** button
5. Scroll the menu to the option "Delete By User". Press the **#?** button
6. Using the arrows scroll to select the User Index number which you want to delete and press the **#?** button
7. The display will show: "Delete Code. Are you sure?". Use the **locked padlock button** to select [Y] and press the **#?** button
If successful, a single confirmation beep is sounded, if not, 3 quick error beeps are sounded
8. Repeat the above steps for deleting additional codes

The ***** button sits under the 7

The **#?** Button sits under the 9

For more assistance please contact FRANKSecure on 07-5588 0100 or service@franksecure.com.au